



# **ADS V4**

# **User's Manual**

# **Part VII**

# **Tire Dataset**

**Rev A**

**May 29, 2020**



## Table of content


<b>1.</b>	<b>INTRODUCTION .....</b>	<b>3</b>
1.1.	THE ROOT NODE TIRES.....	3
1.2.	TO CREATE A NEW TIRE DATASET IN THE CURRENT SESSION .....	4
1.3.	TO LOAD A TIRE DATASET IN THE CURRENT SESSION .....	5
1.4.	TO DUPLICATE A TIRE DATASET AND LOAD IT IN THE CURRENT SESSION .....	6
<b>2.</b>	<b>DESCRIPTION .....</b>	<b>7</b>



## 1. Introduction

### 1.1. The root node Tires

The Tire dataset is created from the root node **Tires**

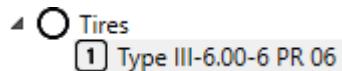

#### Contextual Menu :

##### Right click :

New Tire	To create a new Tire dataset in the current session
Open Tire	To load a Tire dataset in the current session
Duplicate Tire	To duplicate a Tire dataset and load it in the current session

Several Tire datasets may be loaded in the same session

- |              |  |
|--------------|--|
| <b>1</b> ... | The Tire datasets that will be loaded in the current session |
| <b>2</b> ... |  |
| <b>3</b> ... |  |
| <b>4</b> ... |  |


## 1.2. To Create a new tire dataset in the current session

**Commands :**

Right click :

New tire

To create a new Tire dataset in the current session

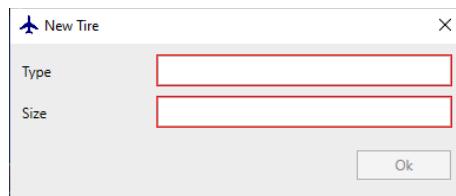

1. Enter
  - a) The name of the Type (Type III)
  - b) The name of the Size (6.00-6 PR 06)
2. Click on OK

The New Tire dataset is displayed in the TreeView


### 1.3. To Load a tire dataset in the current session

**Commands :**

Right click :

Open Tire

To load a Tire dataset in the current session

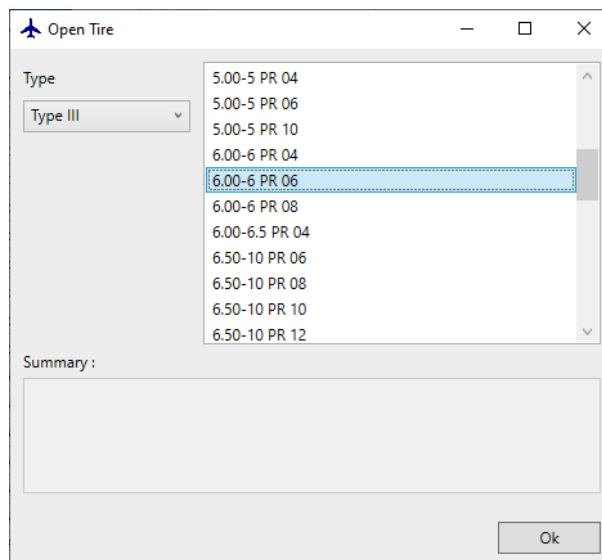

1. Select
  - a) Type  
to filter the list
2. Double click on the name of the Tire dataset or click on the name then click on OK

The selected Tire dataset is displayed in the TreeView


## 1.4. To duplicate a tire dataset and load it in the current session

**Commands :**

Right click :

Duplicate Tire

To duplicate a Tire dataset and load it in the current session

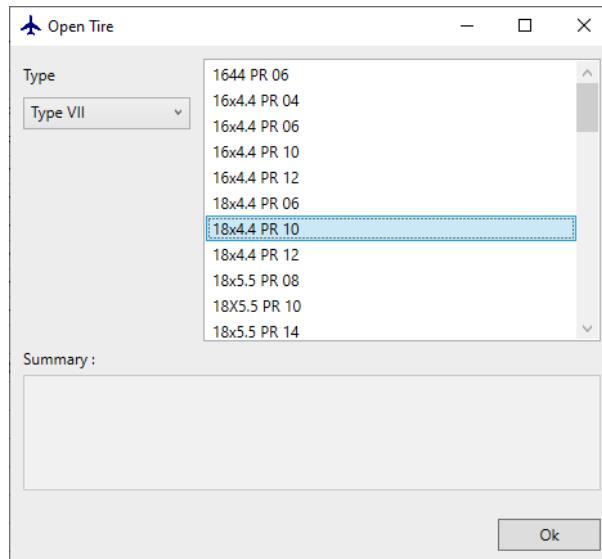

1. Select
  - a) Type  
to filter the list
2. Double click on the name of the Tire dataset or click on the name then click on OK

One copy of the selected Tire dataset is displayed in the TreeView



## 2. Description

Root branch of the current dataset. The header is the concatenation of the Type Name and the Size.

<b>Properties :</b>		
General	Reference	Type III-6.00-6 PR 06
	Type	Type III
	Size	6.00-6 PR 06
Application Rating	Rated inflation	Rated inflation
	Rated Load	Rated Load
	Rated Speed	Rated Speed
Inflated Dimensions	Diameter (Mn)	Minimum outside diameter
	Diameter (Mx)	Maximum outside diameter
	Width (Mn)	Minimum section width
	Width (Mx)	Maximum section width
Miscellaneous	Flat Tire Radius	Flat Tire Radius
	Ply Rating	Ply Rating
Rim Description	Diameter	Specified rim diameter
	Width between flanges	Width between flanges
<b>Commands :</b>		
Right click :		
Duplicate		To duplicate the current dataset
Remove		To remove the current dataset from the current session
Save		To save the current dataset
Save As		To save the current dataset and change its name